

SA-XMS-9U-UNI - raspored pinova i shema spajanja

+12V POWER
COMM BUS RX
COMM BUS TX
GND POWER
SENZORI GND
R12 - NO
R12 - NC
R11 - NO
R11 - NC
R10 - NO
R10 - NC
R9 - NO
R9 - NC
R8 - NO

R7 - NO
R7 - NC
R6 - NO
R6 - NC
R5 - NO
R5 - NC
R4 - NO
R4 - NC
R3 - NO
R2 - NO
R1 - NO
(L) 220V
(L) 220V

28	29	30	31	32	33	34	35	36	37	38	39	40	41
⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗

42	43	44	45	46	47	48	49	50	51	52	53	54
⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗

SA-2-XMS-9U-UNI

Automatika SA-2 (programska verzija SA-2-XM)

⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
1	2	3	4	5	6	7	8	9	10	11	12	13	14

⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗	⊗
15	16	17	18	19	20	21	22	23	24	25	26	27	

Ulaz D1
Ulaz D2
Ulaz D3
Ulaz D4
Ulaz D5
Ulaz D6
Ulaz A/D 1/7
Ulaz A/D 2/8
Ulaz A/D 3/9
Ulaz A/D 4/10
Ulaz A/D5/11
Ulaz A/D 6/12
Ulaz D13
Ulaz D14

Ulaz D15
+5V unfused
+5V 47R fuse
AUX 1
AUX 2
AUX 3
AUX 4
AUX 5
AUX 6
RS232 - RX
RS232 - TX
GND
GND